

# H.264 NETWORK Embedded DVR

**USER MANUAL  
V2.0**

---

# CONTENT

<b>1. INTRODUCTION .....</b>	<b>3</b>
<b>1.1 PREODUCT INTRODUCE .....</b>	<b>3</b>
<b>1.2 PRODUCT FEATURE .....</b>	<b>3</b>
<b>1.2.1 SPECIFICATION .....</b>	<b>3</b>
<b>1.2.2 BASIC WORKING PARAMETER .....</b>	<b>4</b>
<b>1.3 ENVIRONMENT ADAPTABILITY .....</b>	<b>5</b>
<b>2. DEVICE OPERATION.....</b>	<b>6</b>
<b>2.1 REMOTE KEY INSTRUCTION .....</b>	<b>6</b>
<b>2.1.1 REMOTE CONTROL .....</b>	<b>6</b>
<b>2.1.2 MOUSE OPERATION .....</b>	<b>7</b>
<b>2.2 SYSTEM OPERATION .....</b>	<b>8</b>
<b>2.2.1 USER LOGIN .....</b>	<b>8</b>
<b>2.2.2 GUI OPERATION .....</b>	<b>9</b>
<b>2.2.3 DEVICES SETUP .....</b>	<b>16</b>
<b>2.2.4 SYSTEM SETUP .....</b>	<b>21</b>
<b>3. IE OPERATION.....</b>	<b>24</b>
<b>3.1 FEATURE .....</b>	<b>24</b>
<b>3.2 USER LOGIN.....</b>	<b>24</b>
<b>3.3 OPERATION INTERFACE .....</b>	<b>24</b>
<b>3.3.1 LIVE.....</b>	<b>25</b>
<b>3.3.1.1 PTZ CONTROL .....</b>	<b>25</b>
<b>3.3.1.1.1 ZOOM .....</b>	<b>25</b>
<b>3.3.1.1.2 PTZ PRESET .....</b>	<b>26</b>
<b>3.3.1.2 PLAY.....</b>	<b>26</b>
<b>3.3.1.3 OTHER OPERATION .....</b>	<b>26</b>
<b>3.3.2 REPALY.....</b>	<b>26</b>
<b>3.3.3 SETUP.....</b>	<b>28</b>
<b>3.3.3.1 RECORD.....</b>	<b>28</b>
<b>3.3.3.2 ALARM.....</b>	<b>28</b>
<b>3.3.3.3 PTZ.....</b>	<b>29</b>
<b>3.3.3.4 NETWORK .....</b>	<b>29</b>
<b>3.3.3.5 SETTING.....</b>	<b>30</b>
<b>3.3.3.6 MAINTENACE .....</b>	<b>31</b>
<b>3.3.3.7 HOST INFO .....</b>	<b>31</b>
<b>4. DVR INSTALLATION.....</b>	<b>32</b>
<b>4.1 PRODUCT OVERVIEW .....</b>	<b>32</b>
<b>5. FAQ.....</b>	<b>36</b>
<b>6. TROUBLE SHOOTING .....</b>	<b>38</b>
<b>7. PACKAGE CONTENT.....</b>	<b>39</b>

---

# 1. INTRODUCTION

## 1.1 PREODUCT INTRODUCE

It is 16 channels CIF resolution digital video recording DVR, which have local recording, playback, support triple code remote network surveillance, data backup, parameter setting, motion detection, I/O alarm setting, PTZ and USB mouse, USB2.0 backup, IE browser and back up.

## 1.2 PRODUCT FEATURE

- ◇ H.264 compression
- ◇ Two USB interface, USB2.0 for data backup, USB1.1 for mouse operation.
- ◇ 2 pcses 3.5" SATA HDD at most.
- ◇ Special file system for security.
- ◇ 16 bit color translucent user-friendly GUI, with notes for selected menu items
- ◇ Optimized one four channel simultaneously playback
- ◇ double level user management
- ◇ Support the live view, parameter setting and copy playback video via network.

### 1.2.1 SPECIFICATION

Item	Device	performance index
System	Language	Chinese/English
	GUI	Graphic menu
	password	user password, administrator password
Video	Video in	16ch composite video input 1.0V p-p,impedance75Ω,BNC
	Video out	2ch complex video output 1.0V p-p,impedance75Ω,BNC
	Video display	1/4/9/16 switch
	Video standard	PAL,25f/s,CCIR625line,50scene NTSC,30f/s,CCIR525line,60scene
Audio	Audio input	16ch audio input, impedance 600Ω,RCA
	Audio output	1ch audio output, impedance 600Ω,RCA
	Basic electricity output	Linearity electricity
	Record style	Audio video recorded simultaneously
	Audio compression	ADPCM
Picture proceeding and store	Picture compression	H.264
	Resolution	CIF
	Streaming style	ISO14496-10
	Audio style	ADPCM

	Video code rate	CIF: 384Kbps ~ 768Kbps
	Audio code rate	32KB/s
	Data storage	Support mainstream SATA HDD
Alarm	Alarm input	16 alarm input
	Alarm output	1 alarm output
Connector	Serial interface	Support 1 RS232
	Serial interface	Support 1 RS485
	Network interface	RJ45,10M/100M
USB	Mouse	USB1.1
	Thumb drive	USB2.0
VGA	VGA	1 VGA (optional)
Software	PC playback	Playback video file
Software upgrade	Support USB firmware upgrade	
others	voltage input	AC:110~240V
	Voltage output	DC:19V@3A or 3.42A
	Power	16W without HDD
	Working temperature	-10----50℃

### 1.2.2 BASIC WORKING PARAMETER

item	parameter	Description
Voltage input	19V	DC 19V
Video impedance input	75Ω	75Ω each channel.
Video output	1Vp-p	1Vp-p CVBS signal
I/O	0—2V	Low voltage alarm
	5V-30v	High voltage alarm
RS232		serial port, for extend use
RS485		Connect to PTZ, (Pelco-D,Pelco-P)
SATA HDD		2 SATA HDD with mainstream capability

---

### 1.3 ENVIRONMENT ADAPTABILITY

For safety while using the DVR and to prolong device life, please pay attention to the following details:

- 1) When installing device, please comply with all the electric product safety criteria.
- 2) Power and ground:
  - ◆ Do not touch the power and DVR with a wet hand
  - ◆ Do not drop liquid on DVR
  - ◆ Do not put any object on DVR
  - ◆ Please use soft dry cloth to clean DVR; do not use chemical impregnant.
  - ◆ The Device will have voltage before startup if the power line is connected to power Source.
  - ◆ Please unplug power line from power source if the Device is not intended to be used for a prolonged time.

## 2. DEVICE OPERATION

In device operation, the enter key on remote control has the same function as left click of the mouse.

### 2.1 REMOTE KEY INSTRUCTION


#### 2.1.1 REMOTE CONTROL

The remote control is the secondary input device for navigating the system's interface.

To use the remote control:

1. **STANDBY**: Press to turn standby mode ON/OFF.
2. **LOGIN/LOCK**: If "Security" has been enabled in the ISetup menu, press to open the user password login screen.

3. **Number/Channel buttons**: While in menus, press buttons 0~9 to enter values; during live viewing, press to view channels in full-screen.



 
 
4. : Press to switch between quad and split-screen displays.

5. **MENU**: Opens the main menu.

6. **PTZ**: Press to open the PTZ control window.

7. **EXIT**: Close menu windows.

8. **Navigation/OK**:

- /CH+: Move cursor in menus up; Channel Up.
- /FWD: Move cursor in menus right; during playback, increase forward playback speed (5X, 15X, 60X).
- /REW: Move cursor in menus left; during playback, increase reverse playback speed (5X, 15X, 60X)
- /CH-: Move cursor in menus down; Channel down.
- **OK**: In menus, press to confirm selections; during playback and preview, press to view system information

 
 
 
 

9. **+ / -**: In menus, press to adjust values.


10. **RECORD**: Press to start manual recording.

11. **STOP**: Press to stop manual recording.

12. **EXTRA**: For the future use.

13. **Playback controls**:

- : Increase reverse playback speed 1X, 2X, 4X
- : Press to start playback
- : Press to increase forward playback speed 1X, 2X, 4X
- : Press to slow playback speed by 1/2, 1/4, 1/8
- : Press to freeze playback to one frame, then press again to advance frame-by-frame

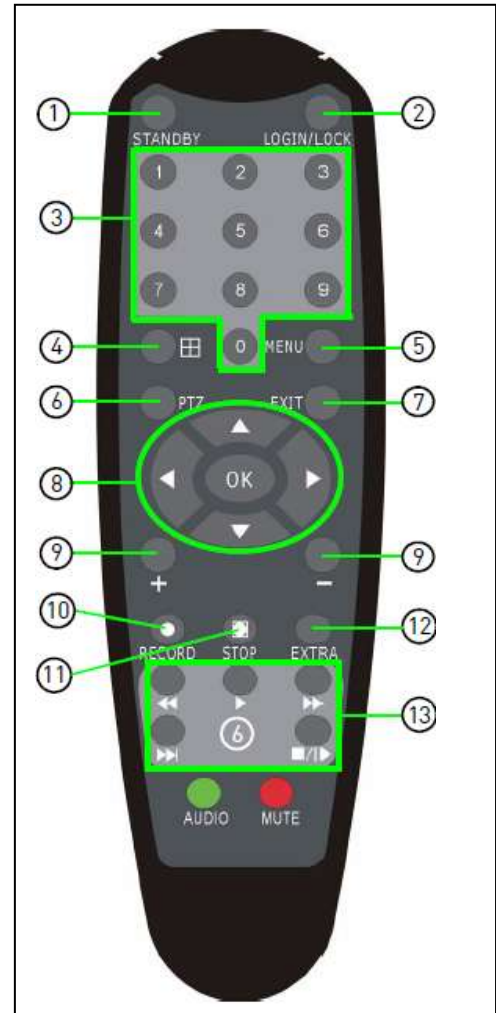

**TIP:** When using the remote control to enter password and camera titles, select the field using the navigation buttons, press ENTER, and then press the number buttons.

## 2.1.2 MOUSE OPERATION

The mouse is the primary input device for navigating system menus.

**NOTE:** Unless otherwise noted, all system functions described in this manual are achieved through mouse input.

To use a mouse with the system:

- 1) Connect a USB mouse to the **USB MOUSE port** on front panel of the system.

**NOTE:** Only the top USB port on the front panel is designed for data backup to a USB flash drive. Do not connect a USB flash drive to the bottom USB port on the rear panel.

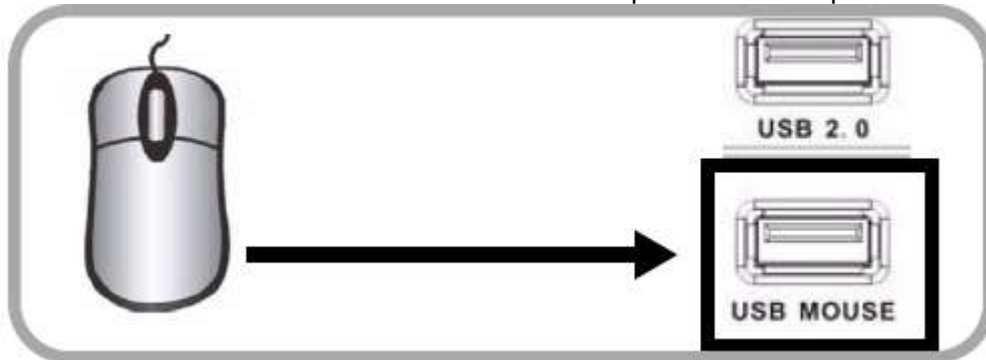


Figure 1.0 Connect a USB mouse to the bottom USB port on the front panel

- 2) Use the mouse buttons to perform the following:
  - **Left-Button:** Click to select a menu option; during live viewing in split-screen, double-click on a channel to view the selected channel in full-screen.; double-click the channel again to return to split-screen view
  - **Right-Button:** Click to open the Sub-Menu
- 3) **Scroll-Wheel:** No function.

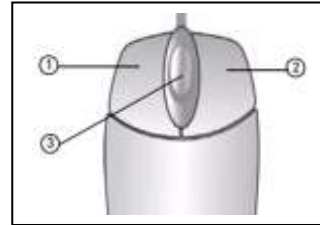


Figure 1.1 Mouse button operation

---

## 2.2 SYSTEM OPERATION

### 2.2.1 USER LOGIN

#### 1. STARTING THE SYSTEM

To power the system ON/OFF:

Connect the power cable to the DC 19V port on the rear panel. At startup, the system performs a basic system check and runs an initial loading sequence. After a few moments, the system loads a live display view.

#### Standby Mode

The system can also be put into Standby Mode. Power will remain to the system but will not be recording.

To start/stop Standby mode:

- 1) Press and hold the **POWER** button on the front panel or remote control until the prompt closes. The system enters standby mode.
- 2) Press and hold the **POWER** button on the front panel or remote control until the system beeps. The system will begin powering up.

#### Password

**ATTENTION:** By default, passwords are **disabled** on the system. You do not need to enter a password when accessing any system menus. However, for security purposes, it is highly recommended to enable passwords on the system using the Password Menu.

#### NOTE:


- 1) If there is no HDD in device, or the device didn't read the HDD, or the HDD didn't be formatted it will display an **【H】** in the video preview interface.
- 2) You must format the HDD in the DVR before first using. The steps as follows: menu > HDD management > format. After formatting, the system will restart.

#### 2. SYSTEM LOGIN

When you login, you will find the window as follow if the password is enabled, Input device ID and user password via numeric key-board, and you can access to main menu via press

**【Apply】**

**Remark:** default device ID is: 000000, and the password is :user password is 000000 and Admin password is 020818, in order to manage the device more convenience, please setup the user password and change the device ID in the base setup. You can setup user and admin password, Administrator has all authorities, operator has limited authorities who they can only watch, playback, please change the unit ID and default password in time for system security.

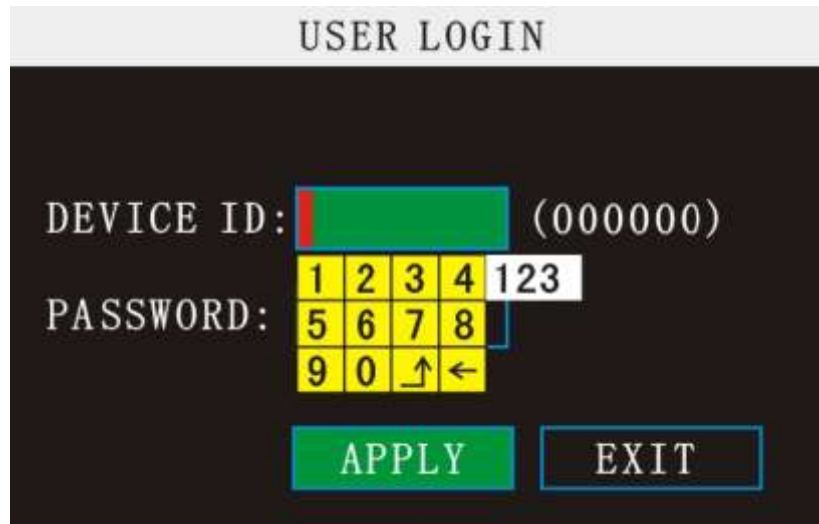

**DEVICE ID:** You just need to enter the unit ID as the right frame.

**PASSWORD:** enter the admin password or user password.

## 2.2.2 GUI OPERATION

The main menu include


“CAMERA”, “RECORD”, “NETWORK”, “SEARCH”, “DEVICES”, and “SYSTEM”.



**Remark:** You must after pressing “APPLY” to make the setting for submenu valid. It will no use when exit directly. This DVR have a special feature is: when you move the mouse to everywhere, there will have the explanation information showed auto.

### 2.2.2.1 CAMERA

Move the cursor to **【CAMERA】** (Icon highlighted when selected) , press **【Enter】** to enter into the setting interface.

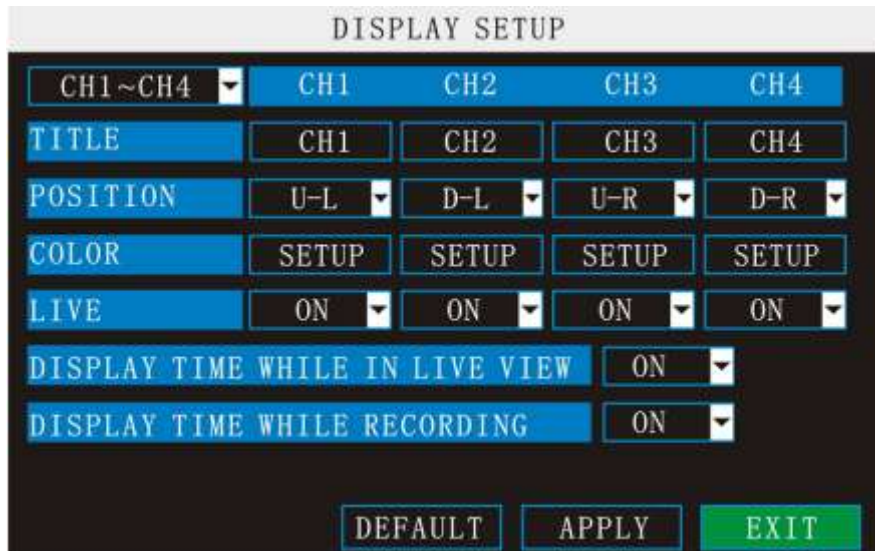


**CH1~CH4:** you can select the CH1~CH4, CH5~CH8, CH9~CH12, CH13~CH16 here.

**NAME:** press **【Enter】** to enter into the setting interface.

**POSITION:** press **【Enter】** to switch name location, there are 5 options.

**COLOR:** press **【Enter】** to enter into setting interface, as following:

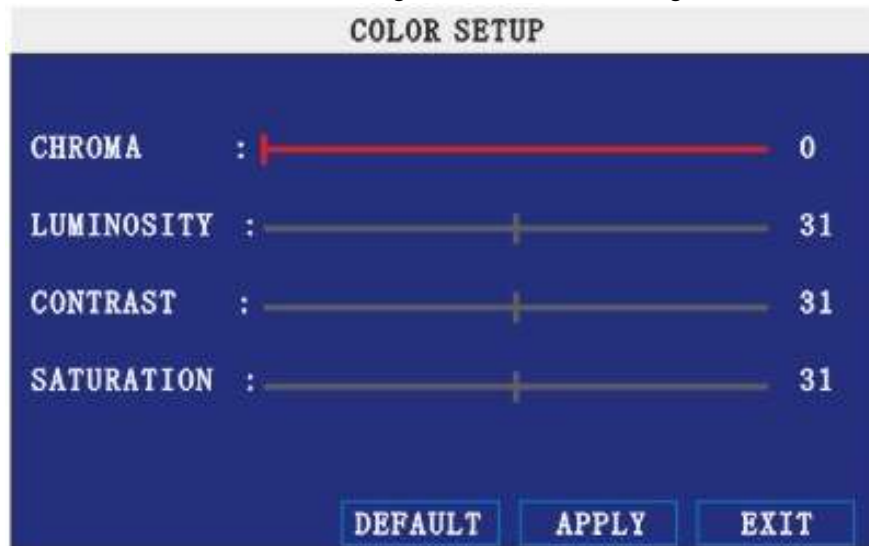

Press **【Enter】** or **【+】** **【-】** key or directly drag the cursor to set colors, including chroma, brightness, contrast and saturation, press **【APPLY】** to save the parameters.


**LIVE:** ON: Means the channel is allowed to view the live mode, OFF means not.

**DISPLAY TIME WHILE IN LIVE VIEW:** ON: Means yes, OFF means not.

**DISPLAY TIME WHILE RECORDING:** ON: Means yes, OFF means not.

### 2.2.2.2 RECORD SETUP

Move the cursor to **【RECORD】** (Icon highlighted when selected), press **【Enter】** to enter into the setting interface. Press **【Confirm】** and enter into the setup interface, and you can use direction keys and cursor to change the options.

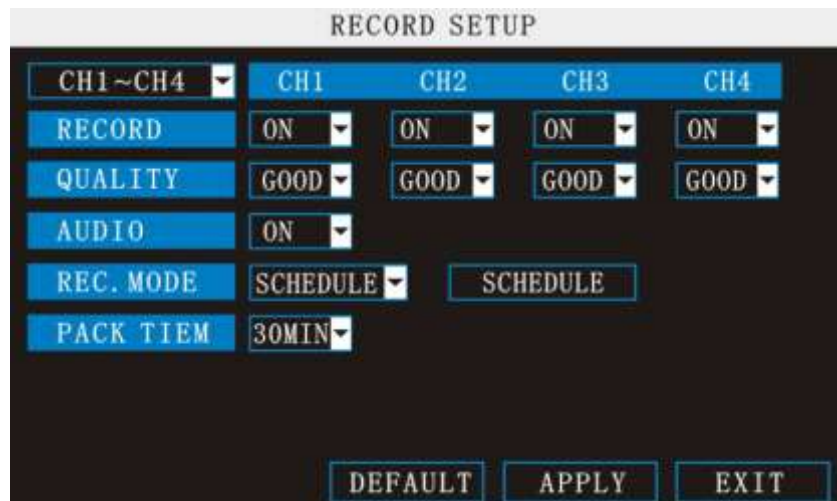

**CH1~CH4:** you can select the CH1~CH4, CH5~CH8, CH9~CH12, CH13~CH16 here.

**RECORD:** ON: Means the channel enable for recording.


**QUALITY:** There are three options, corresponding different data stream standard

**AUDIO:** ON: Means enable the audio recording for all channels, OFF: Means disable audio recording

**REC.MODE:**

POWER UP: Means the device will start recording when it startup.

TIME: Recording as the schedule, you can setup the schedule as you want as follow.

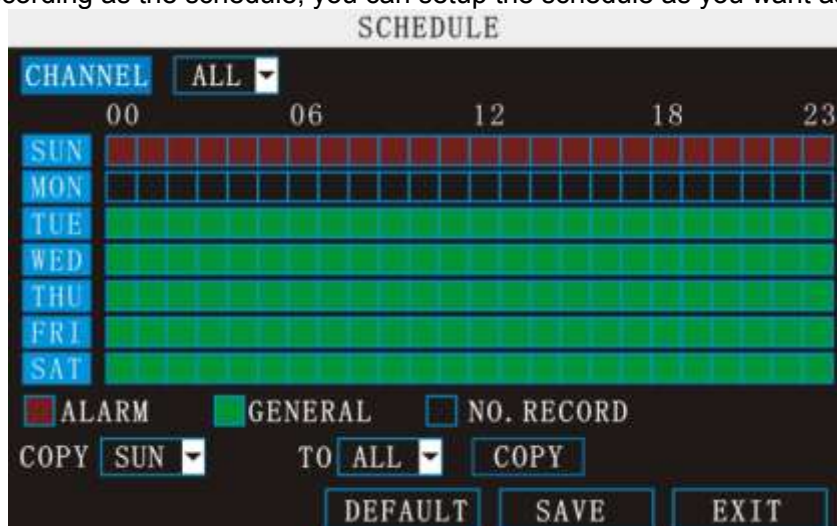

**CHANNEL:** You can select all channels or just one channel to setup schedule.

**WEEKLY:** You can setup each as you want. There are ALARM, NORMAL, NO REC three modes, if you select this, there will have a √ in the frame, that means when you select the period of the day it will record as this mode, and you can just setup one day, then copy the setting to all other days. Different color means different record mode: Red means alarm record, green means normal record, grounding means no record.

**PACK TIME:** There are 15min, 30min, 45min, 60min four options, that means it will pack as the mode you selected

Scroll to **APPLY** and press **ENTER** to save the new settings.

### 2.2.2.3 NETWORK SETUP

Move the cursor to [NETWORK SETUP] (icon highlighted when selected), and press **【Enter】** to enter into setting interface .

**TYPE:** There are PPPOE, DHCP & Static three options.

- **STATIC**

Select [Static] in the type, and press [Enter] to enter into the interface as followings

The screenshot shows a 'NETWORK SETUP' menu with the following fields and values:

TYPE	STATIC
PORT	09000
WEB PORT	00080
IP ADDRESS	192.168.015.141
NETMASK	255.255.255.000
GATEWAY	192.168.015.001
DNS	202.096.134.133

At the bottom, there are three buttons: 'DDNS SETUP', 'DEFAULT', and 'APPLY' (highlighted in green), and 'EXIT'.

**PORT:** For video transmission via IE.

**WEB PORT:** setup the port of IE browser via HTTP.

**IP ADDRESS:** setup the IP address, and press [Enter] or number keys to change the value.

**NETMASK:** press [Enter] or number keys to change the value.

**GATEWAY:** press [Enter] or number keys to change the value.

● **DHCP**

Select the DHCP, and enter into the interface as followings.

The screenshot shows a 'NETWORK SETUP' menu with the following fields and values:

TYPE	DHCP
PORT	09000
WEB PORT	00080
DNS	202.096.134.133

At the bottom, there are three buttons: 'DDNS SETUP', 'DEFAULT', and 'APPLY' (highlighted in green), and 'EXIT'.

**PORT:** the communicate port between PC and DVR, recommend use default port.

**WEB PORT:** setup the port of IE browser via HTTP.

**Remark:** when you setup the net mode as DHCP, the router will arrange a dynamic IP for DVR.

● **PPPOE**

Select the PPPOE, and enter the interface as followings

NETWORK SETUP	
TYPE	PPPOE
PORT	09000
WEB PORT	00080
PPPOE NAME	s*****@***.gd
PASSWORD	*****
DNS	202.096.134.133
DDNS SETUP	
<input type="button" value="DEFAULT"/> <input type="button" value="APPLY"/> <input type="button" value="EXIT"/>	

**MEDIA PORT:** the communicate port between PC and DVR, recommend use default port

**WEB PORT:** setup the port of IE browser via HTTP.

**PPPOE username and password:** fill the username and password of the internet service offer, and apply it and reboot the system. After rebooting, the device will save it and set the PPPOE as default network type. If succeed, the IP address will be automatically config as dynamic IP of WAN.

DDNS SETUP	
DDNS	ON
SERVICE	3322
HOST NAME	cqrm*****.oicp.net
USERNAME	cqrm*****
PASSWORD	*****
<input type="button" value="DEFAULT"/> <input type="button" value="APPLY"/> <input type="button" value="EXIT"/>	

**DDNS:** There are [ON/OFF], and if there is a DDNS service, please setup it as ON.

**SERVICE:** There are 3 services to select, 3322, dyndns, and perfecteyes.

**HOST NAME:** Input the name of the host server.


**USERNAME:** Input in the name of the user.

**PASSWORD:** Input the password for DDNS.

#### 2.2.2.4 SEARCH

Move the cursor to **【SEARCH】** (Icon highlighted when selected), press **【Enter】** to enter into the setting interface.

**DATE:** You can adjust the checking date and time, press **【Enter】** input the number directly to adjust the year, month, date. After finishing the time setting, move the cursor to "SEARCH" and press "APPLY", can see the recording status of this date. As follow:

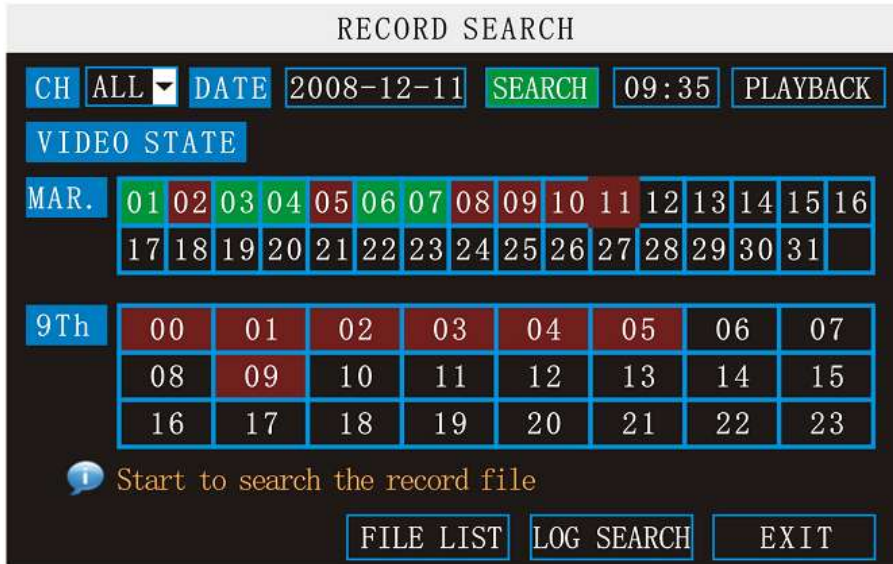

**Instruction:**

**1. MONTH:** It will show all the recording status in this month. Green means normal recording, Red means alarm recording, Grounding means no recording. Click any date in this frame can search the recording status of that day, the searching result will be showed in the below date frame.

**2. DAY:** It will show all the recording status in this day, you can playback the record file in this period via click the corresponding period.


**PLAY:** You can press 【Enter】 input number directly to setup playback time. After setting, move the cursor to “PLAYBACK”, and then press”APPLY”to enter into video playback of that time. Also you can select any period of time in the video status frame after searching,press”APPLY”to enter into the video playback of this period.

**FILE LIST:** Enter into the video file list interface of the selected date.

**LOG SEARCH:** Enter into the log searching interface.

**1. FILE LIST**

Setup the searching date, after pressing “SERACH”,move the cursor to “FILE LIST” and press”APPLY”to enter into the video file list of this date.

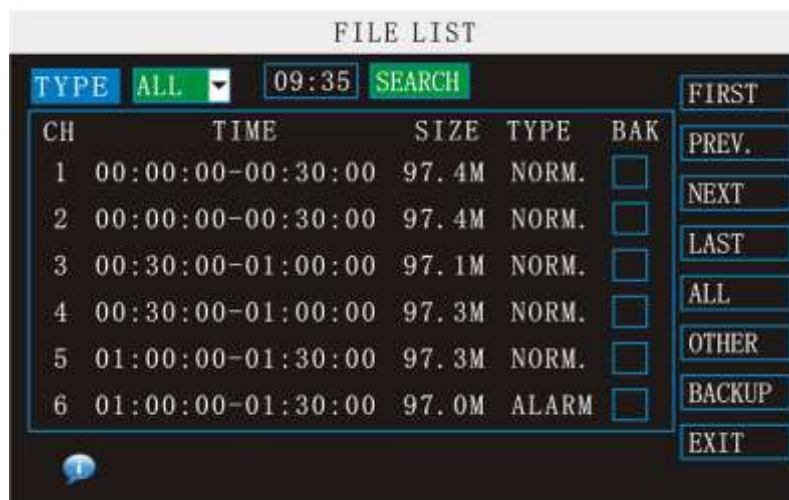

Then you can select four channels as you want to playback, because 16CH DVR support 4channels playback at the same time.




**Instruction:**

1. **【FILE LIST】** ,“CHANNEL”is the recording file which belong to which channel, “SIZE” is display the size of this file (Unit:MB) , “TYPE” is display the type of recording file, there are two types: normal and alarm,press“BACKUP”button can export the selected files to USB storage;
2. After moving the cursor up and down and select the files, and press **【APPLY】** to enter into playback interface. If the all channels have recording files, it will be playback all windows at the same time.
3. If setup as “on” in the **【RECORD TIME】** in **【BASIC SETUP】** , it will show the date/time when playback record file; If setup as “off”it will not display time.
4. When playback, can press **【SLOW】** to play slowly; press **【FORWARD】** and **【REVERSE】** to speed、reverse play; also can press **【PAUSE/STEP】** to pause and frame by frame play; Press **【Exit】** to exit from playback and return to the former menu;
5. When finished playback files, it will return to the file list interface.

**2. LOG SERCH**

Move the cursor to “LOG SERACH” and press”APPLY”to enter into the log file list of DVR, as follow window.

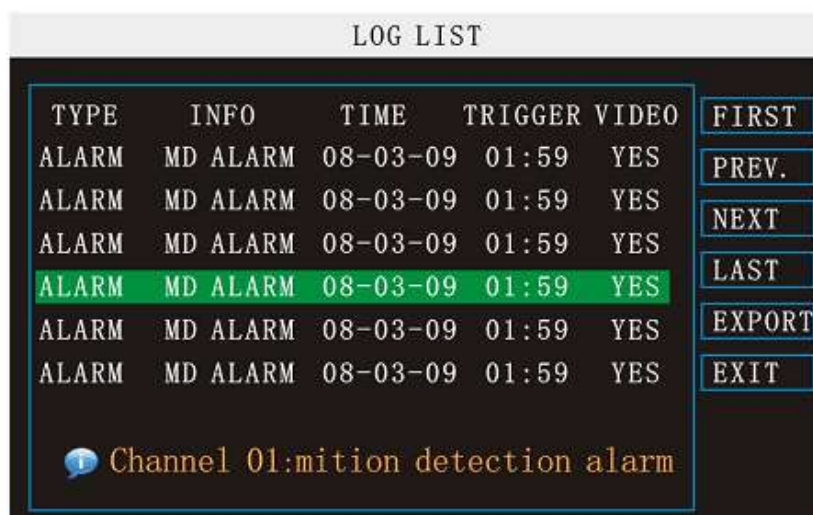

**INFO:** means the alarm type.

**TRIGGER:** means the alarm triggered time.

**VIDEO:** means whether the log has corresponding video file.

### 3. BACKUP

You can use USB for backup, should insert USB device into the USB2.0 port before backup files. And it is support USB OTG.

You can select the recording file by direction keys or **【+】**、**【-】** , and press **【Enter】** means selected OK (There is a “√” at the end of the selected recording files) and press **【Enter】** again the “√” will disappear that means cancel the select, we can start export the recording files after selecting, and press **【BACKUP】** to start to backup, as follow:



Instruction:

1. When the space in backup device less than recording file, the system will prompt “Space no enough”.
2. You can move USB device directly when backup finished.

### 2.2.3 DEVICES SETUP

Move the cursor to **【DEVICES SETUP】** (Icon highlighted when selected) ,press **【Enter】** to enter into setting interface.



Advanced Features include HDD, ALARM, PTZ, MOBILE and MOTION DETECT.

#### 2.2.3.1 HDD MANAGE

Move the cursor to **【HDD】** (Icon highlighted when selected) ,press **【Enter】** to enter into the setting interface, and you can use direction keys and cursor to change the options.



**HDD STATUS:** There status is ok means the HDD is ok. If HDD can not run normally (including unformat and no HDD), there is a **【H】** display on video live view, 16CH DVR can support 4 HDD at most, so you can select the HDD you want to format here.


**OVERWRITE:ENABLE:** means when HDD space less than 4G, it will delete HDD earliest recording file, and it will stop deleting when the space is 10G; **DISABLE:** means when HDD space less than 500M it will stop recording, and an prompt will display in live view “please shutdown and replace HDD”

**HDD FORMAT:** Move cursor there to select device and press **【APPLY】** to start formatting.

**U DISK FORMAT:** format the external thumble drive.

### 2.2.3.2 ALARM SETUP

Move the cursor to **【ALARM SETUP】** (Icon highlighted when selected), press **【Enter】** to enter into setting interface.

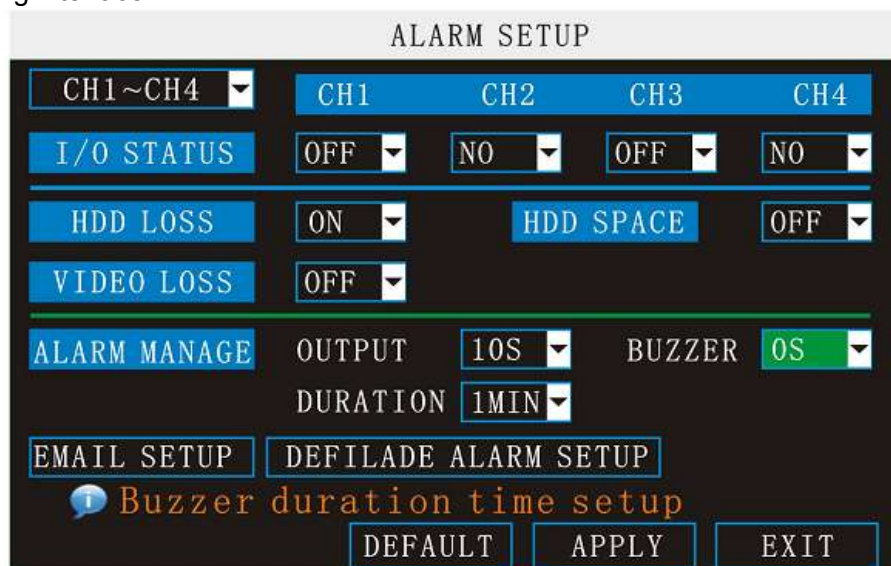

**CH1~CH4:** you can select the CH1~CH4, CH5~CH8, CH9~CH12, CH13~CH16 here.

**I/O ALARM:** Each channel has an I/O status, that is, when an alarm triggered, it will activate the corresponding channel to start alarm recording.

N.O: indicate I / O input level from high to low effective

N.C: indicate I / O input level from low to high effective

**HDD LOSS:**ON means it will trigger a alarm if there is no HDD, and it will display an **【H】** On the bottom left of channel 1 in the live view

**HDD SPACE:** ON: If the space less than 500M, there is a remark in live view: No enough space, please change HDD after shutdown.

**VIDEO LOSS:** ON: when one channel has no video input, it will display “video loss”in live view.

**ALARM MANAGE:** There are alarm output, buzzer and post REC three items.

**OUTPUT:** when an alarm triggered, the alarm output time will be:

0 second、 10 seconds,20 seconds,40 seconds and 60 seconds

- **BUZZER:** buzzer calling time setup when alarm triggered: 0 second,10 seconds,20 seconds,40 seconds and 60 seconds
- **POST REC.:**post recording time setup: 30 seconds,1 minute,2 minutes and 5 minutes

### 2.2.3.3 PTZ SETUP

Move the cursor to **【PTZ SETUP】** (Icon highlighted when selected) ,press **【Enter】** to enter into setting interface, you can setup the parameters for each channel separately.

**CH1~CH4:** you can select the CH1~CH4, CH5~CH8, CH9~CH12, CH13~CH16 here.

**PROTOCOL:** select the protocol of different PTZ, there are two protocols to switch, and the default is Pelco-D

**BAUD RATE:** select the different baud rate for your PTZ, there are 1200, 2400, 4800, and 9600

**DATA BIT:** there are 5,6,7,8 options to select, default setting is 8.

**STOP BIT:** there are 1 and 2 to select, the default setting is 1.

**VERIFY:** there are None/Odd/Even/Mark/Space to select, the default setting is none.

**ADDRESS:** Fill the code of respective PTZ

The screenshot shows the PTZ SETUP menu with a dropdown for 'CH1~CH4' and four columns for 'CH1', 'CH2', 'CH3', and 'CH4'. Each column has settings for Protocol, Baud Rate, Data Bit, Stop Bit, Parity, and Address. At the bottom are buttons for 'DEFAULT', 'APPLY', and 'EXIT'.

CH1~CH4	CH1	CH2	CH3	CH4
PROTOCOL	Pelco-D	Pelco-D	Pelco-D	Pelco-D
BAUD RATE	9600	9600	9600	9600
DATA BIT	8	8	8	8
STOP BIT	1	1	1	1
PARITY	ODD	ODD	ODD	ODD
ADDRESS	001	001	001	001

### 2.2.3.4 SYSTEM INFO

Move the cursor to **【SYSTEM INFO】** (Icon highlighted when selected) ,press **【Enter】** to enter into setting interface, at this interface mainly display system hardware features and firmware version, include : Software version, MAC address and serial number.

The screenshot shows the SYSTEM INFO menu with three rows of information: SERIAL NUMBER, FIRMWARE VERSION, and MAC ADDRESS. An 'EXIT' button is at the bottom right.

SERIAL NUMBER	0003000022
FIRMWARE VERSION	T070103
MAC ADDRESS	00-11-22-33-44-55

### 2.2.3.5 MOBILE

Move the cursor to **【MOBLE】** (Icon highlighted when selected) ,press **【Enter】** to enter into setting interface.

MOBILE	
MOBILE NETWORK	3 G
MOBILE PORT	15962
DEFAULT APPLY EXIT	

**CHANNEL SELECTION:** select the channel for mobile view, and press [Enter] to switch different channels.

**MOBLESS LAN:** Select different mobile network from the options of 3G, 2.5G and 2.75G, and press [Enter] to switch different network.

**PORT:** the port for mobile view, you should open the port in the router for mobile view.

### 2.2.3.6 MOTION DETECT

Move the cursor to **【MOTION DETECT】** (Icon highlighted when selected) ,press **【Enter】** to enter into setting interface.


MOTION DETECTION				
CH1~CH4	CH1	CH2	CH3	Ch4
STATUS	ON	OFF	OFF	OFF
SENSITIVITY	4	3	2	3
MD AREA	SETUP	SETUP	SETUP	SETUP
DEFAULT APPLY EXIT				

**CH1~CH4:** you can select the CH1~CH4, CH5~CH8, CH9~CH12, CH13~CH16 here.

**STATUS:** Each channel has corresponding channel switch, press **【Enter】** to turn on or turn off the motion detection for each channel..

**SNESITIVITY:**Each channel has corresponding sensitivity setting, including four standards high,higher,medium and low, press **【Enter】** key to switch

**MD AREA:** each channel has corresponding regional motion detecting setting, move the cursor to corresponding **【setting】** ,press **【Enter】** to enter regional setting interface, red area means it have activated motion detection, transparent block means it have not activated motion detection.

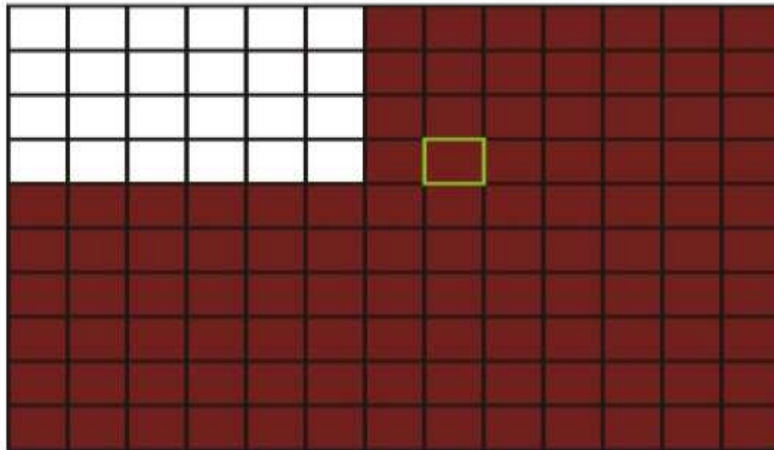

Move the direction key on remote control to make cursor move in the small pane, green frame means the cursor has moved to this pane, press **【Enter】** to select or cancel motion detection of this small pane, when setup finished, press **【exit】** to back to MD setup interface, it will save automatically.

**Remark:**

IR Operation: press [Menu] key to select or cancel the entire screen.

Mouse operation: click left and drag the frame to setup the region for motion detection.

**2.2.3.7 SYSTEM MAINTAIN**

Move the cursor to **【SYSTEM MAINTAIN】** (icon highlighted when selected), and press **【Enter】** to enter into system maintain setup interface.




**AUTO MAINTAIN:** When switch is on, you can setup the time for device to restart.

**SYSTEM UPDATE:** Copy the update file to the dvrupgrade folder in the root directory of the thumb driver, and insert it into USB 1.0, then press [Enter] to upgrade the firmware, and it will display the process of the system upgrading, as following:

**LOAD DEFAULT:** Restore all the settings as the factory setting.

**REBOOT:** means restart the device.

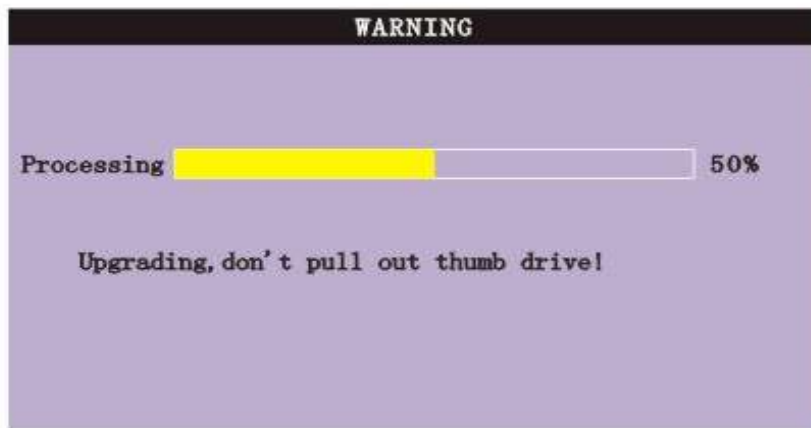

### 2.2.3.8 EXIT

Move the cursor to **【EXIT】** (Icon highlighted when selected), press **【Enter】** to back to main menu.

### 2.2.4 SYSTEM SETUP

Move cursor to select "SYSTEM SETUP" (The big icon means selected) and press **【ENTER】** to enter into the system language setup interface.



System setups include time/date, password, video/audio, language, info and maintain six options.

#### 2.2.4.1 DATE/TIME SETUP

Move cursor to select "date/time" (icon highlighted when selected) and press **【ENTER】** to enter into the date/time setup interface.

**DATE:** Setup system date via numeric key.

**DATE FORMAT:** Press ENTER to switch between the date patterns, there are YY-MM-DD and MM/DD/YY two options.

**TIME:** Setup system time via numeric key.

**TIME FORMAT:** Press ENTER to switch between the date patterns, there are 12 HOURS and 24 HOURS two options.

**Remark:** You must move the cursor to the 【MODIFY TIME AND DATE】 and press 【APPLY】 to save it, otherwise it won't save the modify if you exit this interface.

**DST:** DST settings, you can setup DST as you want here.

#### 2.2.4.2 PASSWORD

Move the cursor to【PASSWORD】 (Icon highlighted when selected) , press【Enter】to enter into the setting interface.

**DEVICE ID:** Press number key to setup the unite ID

**PASSWORD:** Press 【APPLY】 to start or close user password. If it is “ENABLE”, you must input password when log in, otherwise, you can enter into main Menu directly.


**USER PASSWORD:** Press number keys to setup user password.

**ADMIN PASSWORD:** Press press number keys to setup admin password.

**NETWORK PW CLEAN:** Means the password for IE, if you select it, you can reset the IE password, the default password is blank.

#### 2.2.4.3 VIDEO/AUDIO SETUP

Move the cursor to【VIDE/AUDIO SETUP】 (Icon highlighted when selected) ,press【Enter】 to enter into setting interface.

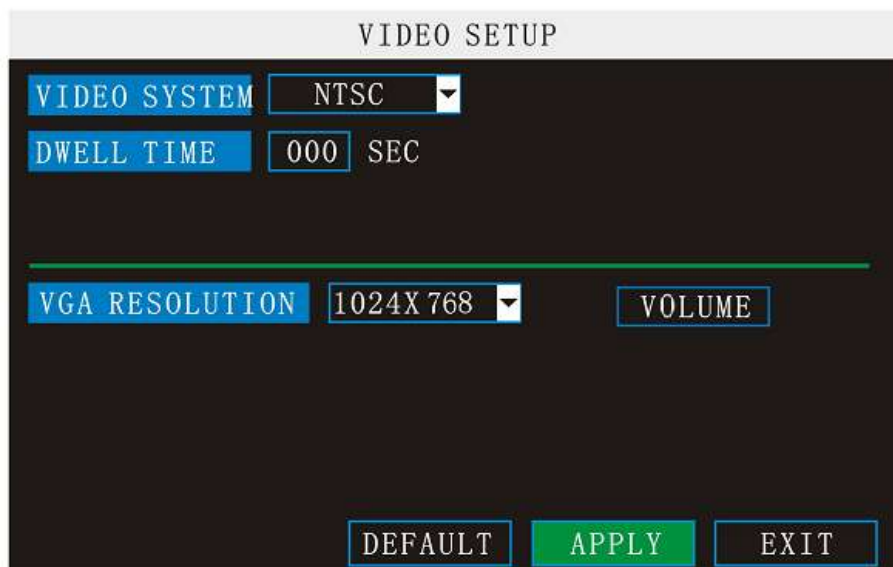

**VIDEO SYSTEM:** press **【Enter】** to switch camera system, has PAL and NTSC two options

**VIDEO PORT:** there are two options: live-out and spot-out, correspond with the two video out on the back panel of DVR, live out means it will display the channel loop function, and spot-out means just display the live view.

**DWELL TIME:** the interval for channel loop function

**SEQUENCE:** you can setup the channel sequence as you want here.


**VGA RESOLUTION:** press **【Enter】** key to setup the VGA resolution, there are 1024\*768、 800\*600 two options.

**VOLUME:** move cursor to **【VOLUME SETUP】** ,press **【Enter】** to enter into volume setup interface, press number keys or directly drag the cursor to adjust volume.

**Remark:** it will restart if you modify the video system or VGA resolution.

#### 2.2.4.4 LANGUAGE

Move cursor to select “system language” (The highlighted when selected)and press **【ENTER】** to enter into the system language setup interface.

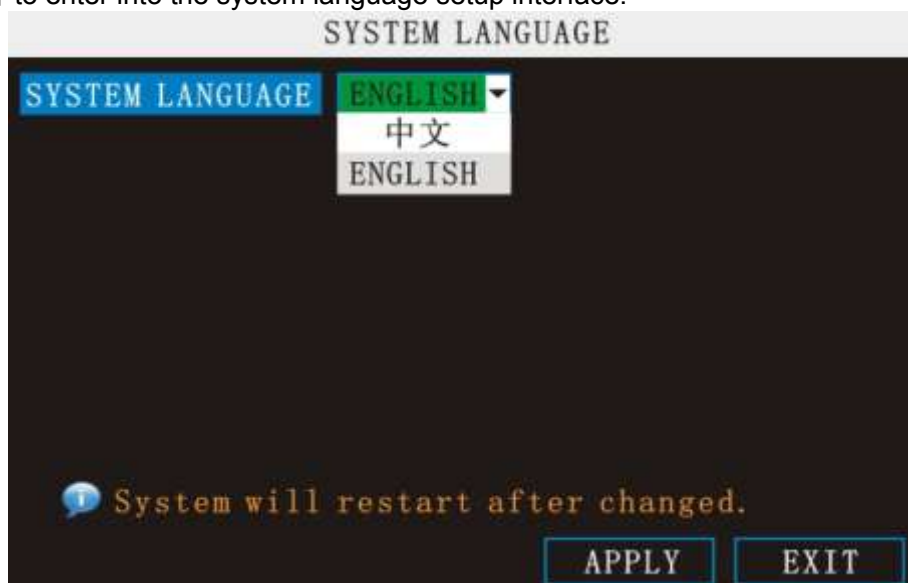

System language have Chinese and English two options, you can setup the language you want in here.

**Remark:** The device will restart when you setup system language success.

---

## 3. IE OPERATION


### 3.1 FEATURE

Through the IE browser of OS and install the software, you are able to do the network operation remotely, which is much more convenient. DVR support C/S, B/S, and visit in LAN and WAN, also support IP and domain name visiting.

**Remark:** Operating system Windows XP, Windows Vista and Browser IE6.0, IE7.0 is recommended

### 3.2 USER LOGIN

Input the DVR local IP in IE browser, when changed the port, you should add the port number after IP address, e.g. if DVR local IP is 192.168.3.97 (LAN) and the port is 8088, you should input http:// 192.168.3.97:8088. The default port is 8088, and directly input http:// 192.168.3.97 to access the login interface as following.

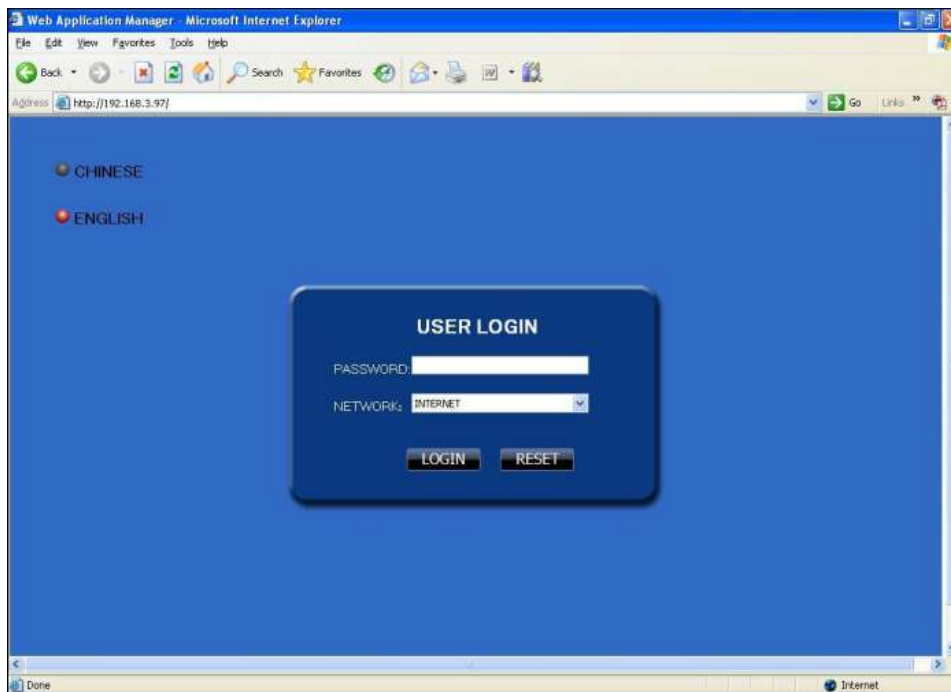

Select English interface in the top left side. Input username and password to enter into the system. The username and passport is same as the ones set in DVR.

**PASSWORD:** Administrator has all authorities, operator has limited authorities who they can only watch, playback, please change the unit No. and default password is blank.


**NETWORK:** LAN/WAN

**Remark:** If you connect the device in WAN, the IP should be a public IP.

### 3.3 OPERATION INTERFACE


There are Live view, Playback and Setup options in the main interface, please press them to access it.


### 3.3.1 LIVE

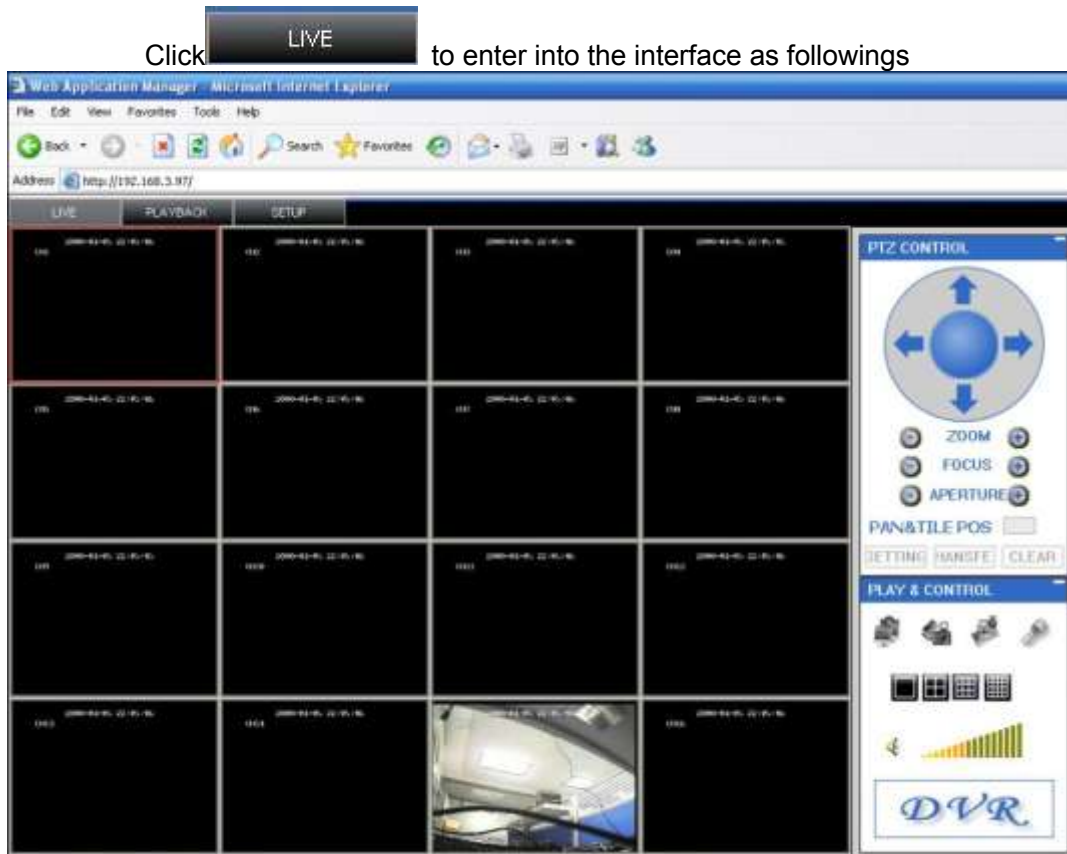





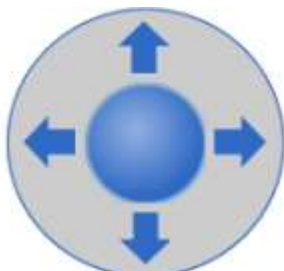
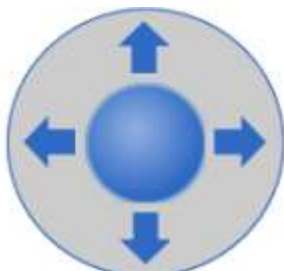
#### 3.3.1.1 PTZ CONTROL

Change the focus, preset aperture to control the PTZ.






Click  to up/down/left/right control movement of the PTZ. When hold on the one direction key, the PTZ will keep circling as that direction after user press the stop key in the center of the wheel.

##### 3.3.1.1.1 ZOOM

- Click  **ZOOM**  to zoom in and out.
- Click  **FOCUS**  to focus
- Click  **IRIS**  to change the size of aperture

### 3.3.1.1.2 PTZ PRESET

PAN&TILE POS:  Setup preset point.

You can control it via the below three buttons:   





### 3.3.1.2 PLAY

Move cursor to the icons, it will highlighted when selected



Open all windows.

Capture picture, save in local disk, the default save path is C:/DVR


Quickly start all channels' recording video, here the left up corner of each channel have normal recording video symbol **【 R 】** , click icon to switch between single screen  /quad  /nine  /16 split  .



Volume adjust button

### 3.3.1.3 OTHER OPERATION


1. Select one channel at preview screen (the selected channel's frame will be change to RED), double click left key, enter to the selected channel single screen display.
2. Click one Chanel via left key at preview screen, then click right key, will occur window shortcut Menu, see below picture

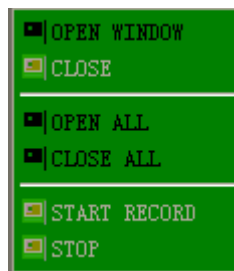




You can open, shut down and start this channel's record via shortcut menu.


3. Click right key at one live view screen, click "open all windows" or "close all windows", will quickly open/close all windows.

### 3.3.2 REPALY

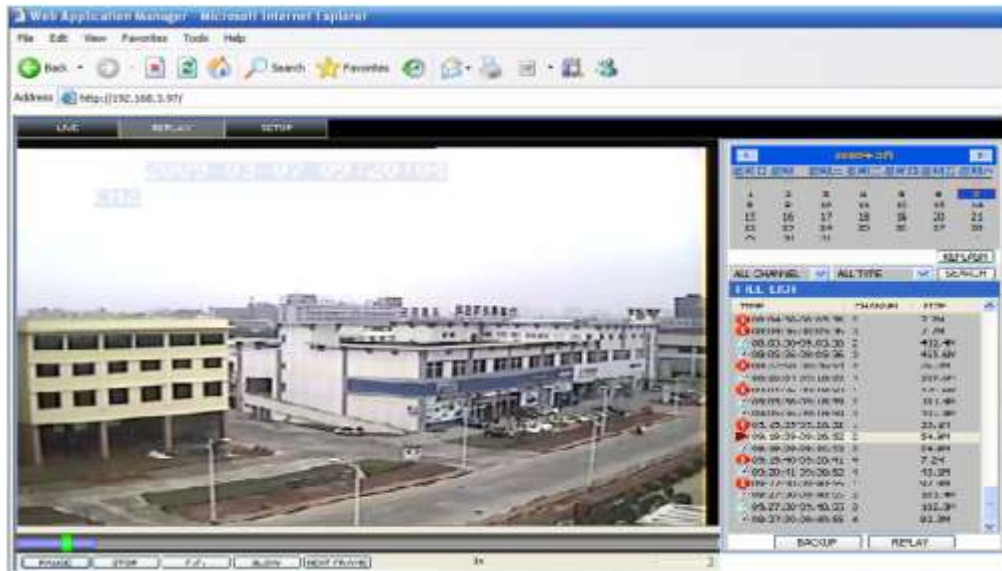Click  to enter into remotely playback interface, which is to playback the record file in DVR.





Click right up of calendar interface  and , to setup the month for searching, click "refresh", at the calendar interface will display the recording information of current month

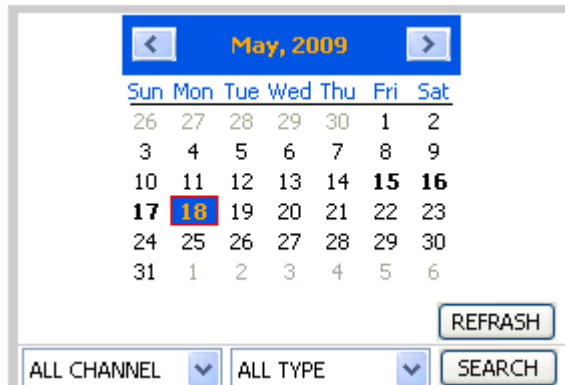


The highlighted date means that day have recording video, RED FRAME means the date is system date, click the date will search that days' recording file list. For example, the above picture display 2008, Dec. 3<sup>rd</sup>, 4<sup>th</sup>, 5<sup>th</sup>, 6<sup>th</sup>, 8<sup>th</sup>, 9<sup>th</sup>, 10<sup>th</sup>, 11<sup>th</sup>, 12<sup>th</sup>, 17<sup>th</sup>, 18<sup>th</sup> have recording video, and system date is 18<sup>th</sup>, Dec, 2008, currently search date is 17<sup>th</sup>, Dec.

At the below of calendar select channel and type, click SEARCH, the result will display, as follow.

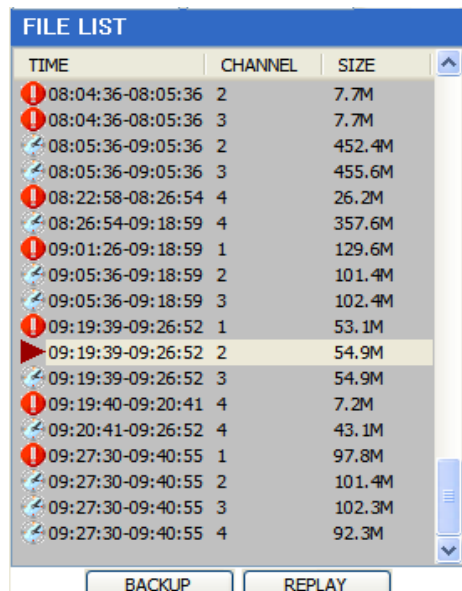

 
Double click one item of listed recording video, the recording video will playback, meanwhile the file icon will change to , and will occur the below picture play buttons:




The above purple progress bar shows download progress, green progress bar shows playback progress


Pause	Switch between pause/play
STOP	Stop play
F.F.	Fast play
SLOW	Slow play
NEXTFRAME	Pause at next frame

### 3.3.3 SETUP


Click  to enter into setup interface, this interface include record, alarm, PTZ, network, setting and system information six menus.

#### 3.3.3.1 RECORD

Click  to enter into setup interface; you can check the parameter settings as in GUI of DVR.

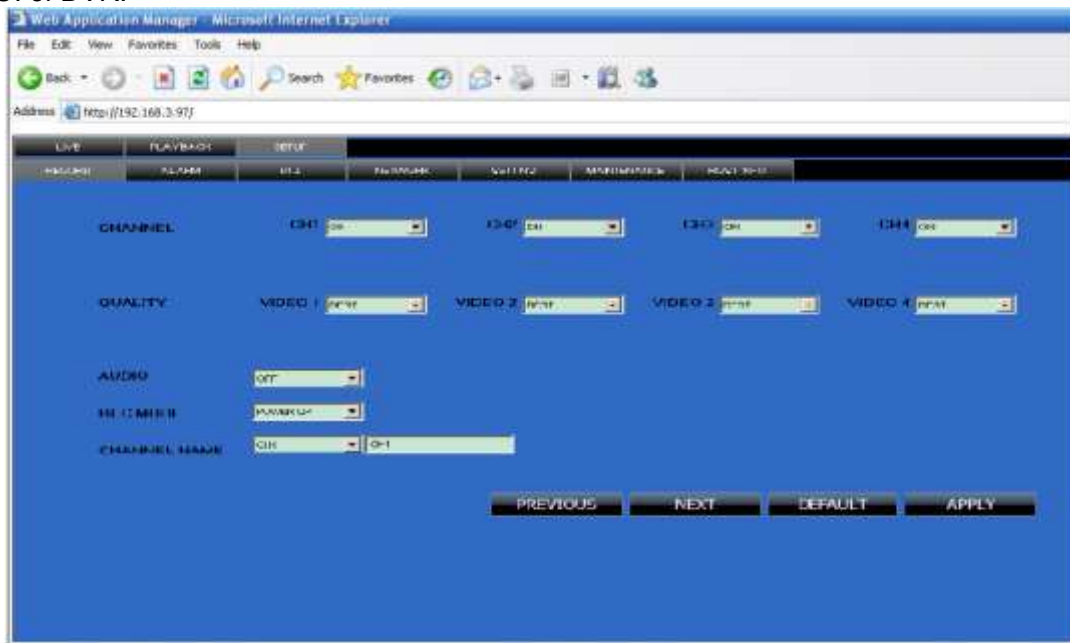


#### 3.3.3.2 ALARM

Click  to enter into setup interface; you can check the parameter settings as in GUI of DVR.



### 3.3.3.3 PTZ




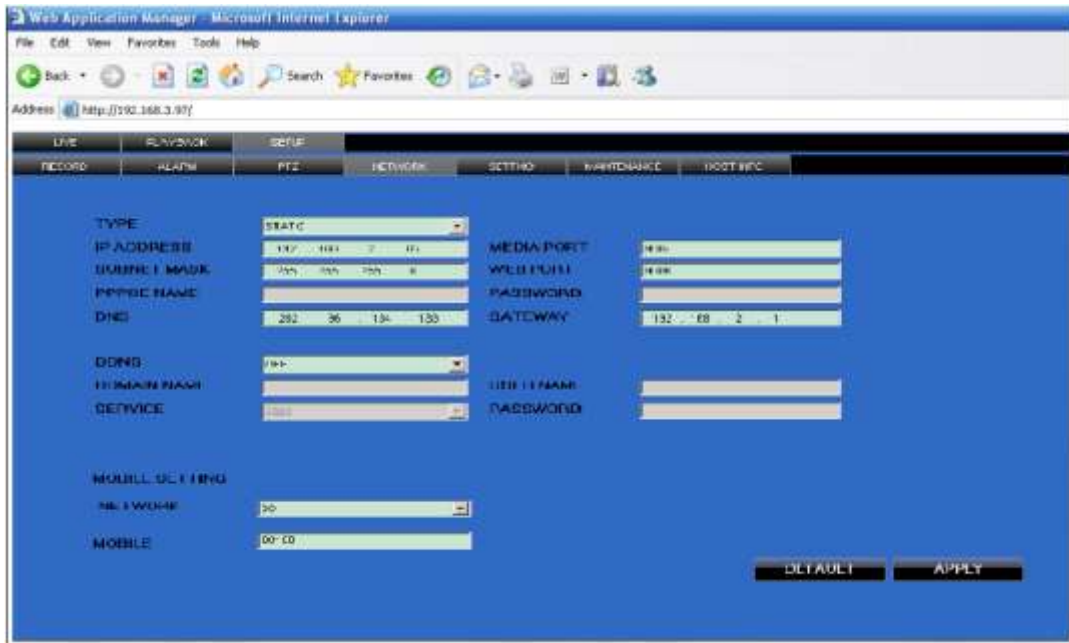
Click  to enter into setup interface; you can check the parameter settings as in GUI of DVR.



### 3.3.3.4 NETWORK




Click  to enter into setup interface; you can check the parameter settings as in GUI of DVR.



### 3.3.3.5 SETTING

Click  to enter into setup interface; you can check the parameter settings as in GUI of DVR.

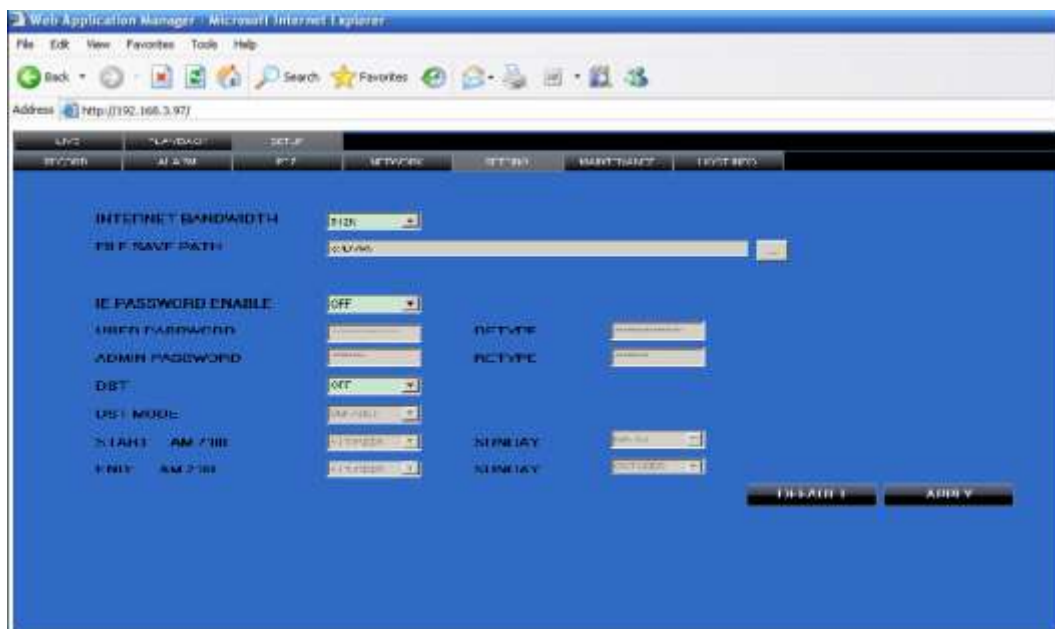

**BANDWIDTH:** Set the amount of bandwidth in kbps (128k, 192k, 256k, 384k, 512k, 1024k) that you want to allocate for traffic that matches internet, this bandwidth not include audio.


**Remark:** the normal ADSL network is between 256k and 384k

**FILE SAVE PATH:** capture picture and recording video save path.


**IE PASSWORD:** setup the password when you login IE


DST settings you can check as DVR setting.

### 3.3.3.6 MAINTENACE

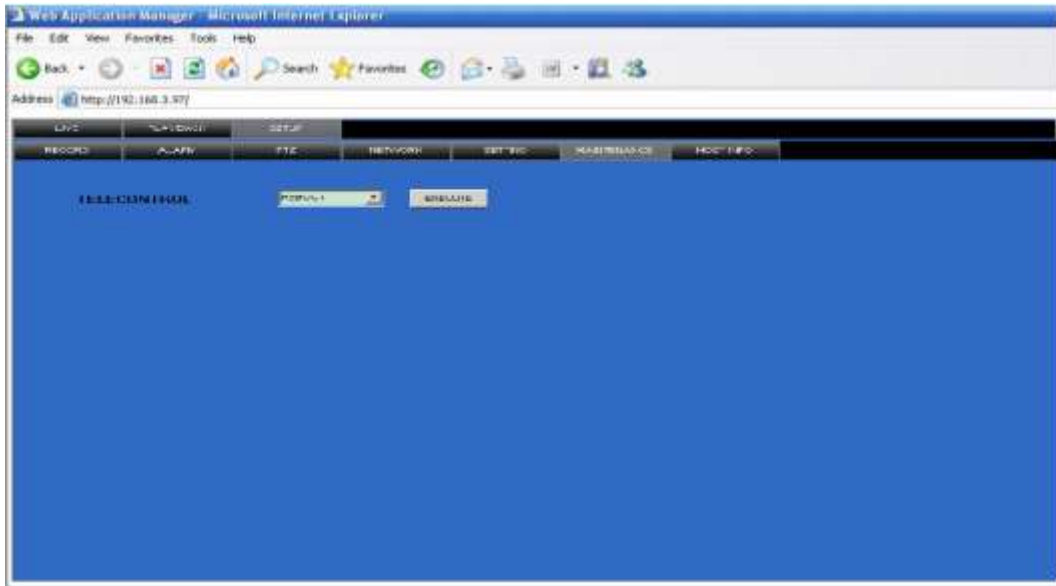

### 3.3.3.7 HOST INFO

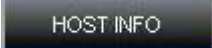Click  to enter into system information interface (see below picture), this interface shows HDD status, remain record time, firmware version, MAC Address, and all the information is fixed.

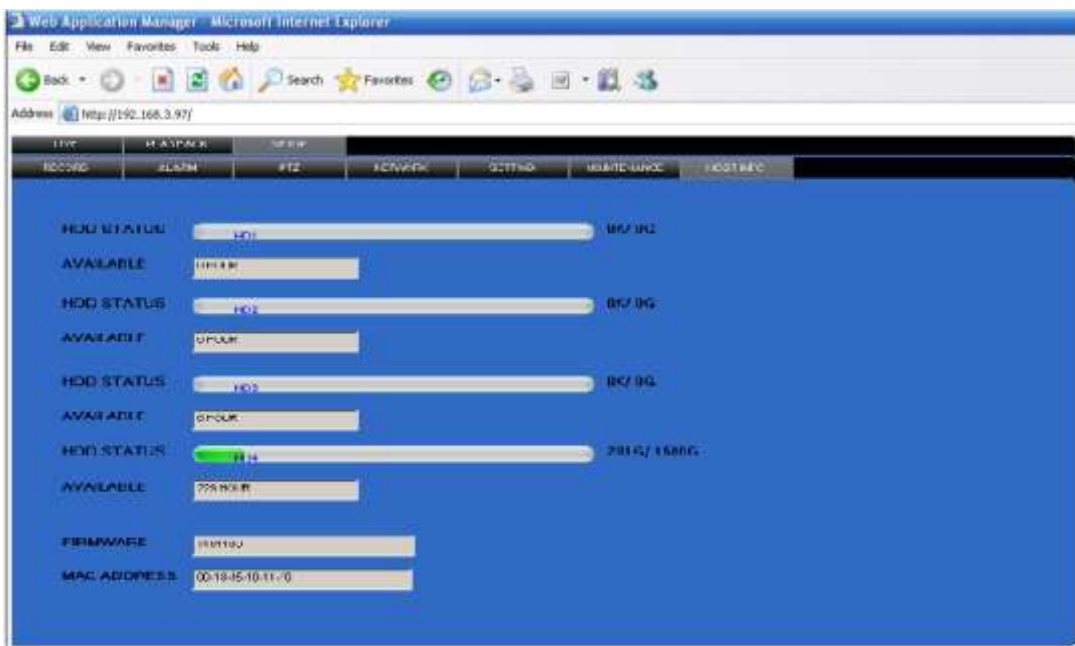

---

## 4. DVR INSTALLATION

### 4.1 PRODUCT OVERVIEW

#### 1. The Definition of Buttons and Connectors on Front Panel



#### Buttons on Front Panel

Item	Silk-Screen	Description
1	ON/OFF	POWER ON/OFF
2	Mouse	USB mouse
4	REC	Recording
	ALARM	Alarm
	HDD1	HDD1 Status
	HDD2	HDD2 Status
	HDD FULL	On means the HDD is full.
	100M	On means network is 100M
	LINK	On means network has connected
	ERROR	Error
	POWER	Power
5	IR	Remote control receiver

2. The definition of buttons and connectors on rear panel




**Connectors on Rear Panel**

Item	Physical connector	Connector description
1	POWER input	DC 19V/3A
2	POWER SWITCH	POWER ON/OFF
3	Video output	Two video output for connecting TV or monitor (BNC)
4	Video input	For connecting analog video signal input (BNC)
5	Audio Input	For connecting audio signal
6	Alarm Input	8 I/O alarm input
	Alarm Output	I/O output for alarm
	RS485	RS 485 for connecting PTZ
	RS232	For connecting PC
7	Network	For connecting Ethernet
8	VGA	For connecting VGA monitor
9	Audio Output	For connection audio output
10	USB	USB2.0/USB mouse

---


### 3. Connectors for Alarm

Peel off the color skin of the cable and then insert the cable into the slot on the rear panel DVR (The connection part for alarm).

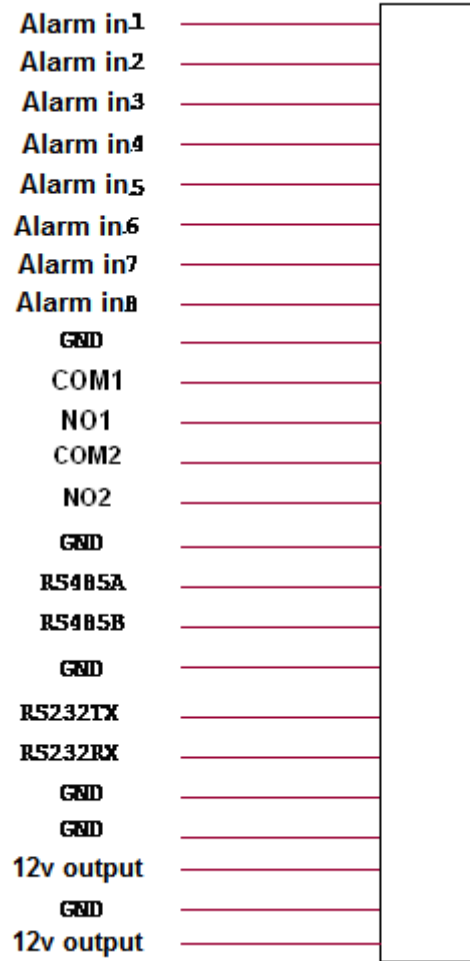


#### 4. Alarm Input and Output


There are 8 sets alarm input connector and 1 set output for this DVR. Alarm input is for connection IR annunciator, fog sensor. The connection diagram of DC alarm input as following:

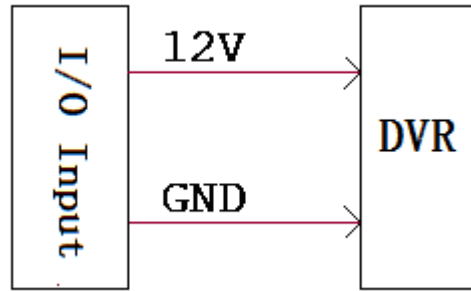

Connection diagram of AC alarm input as following:

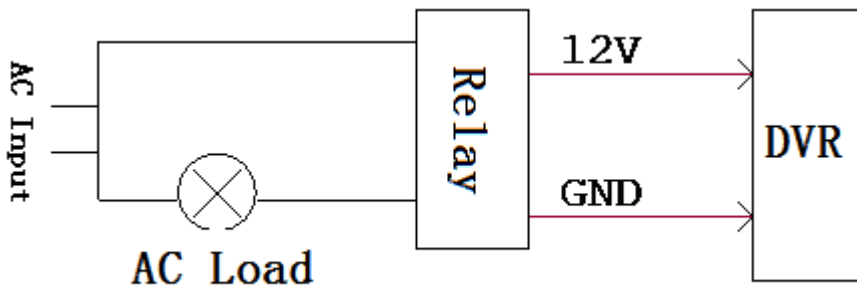

The connection diagram of alarm output as following:

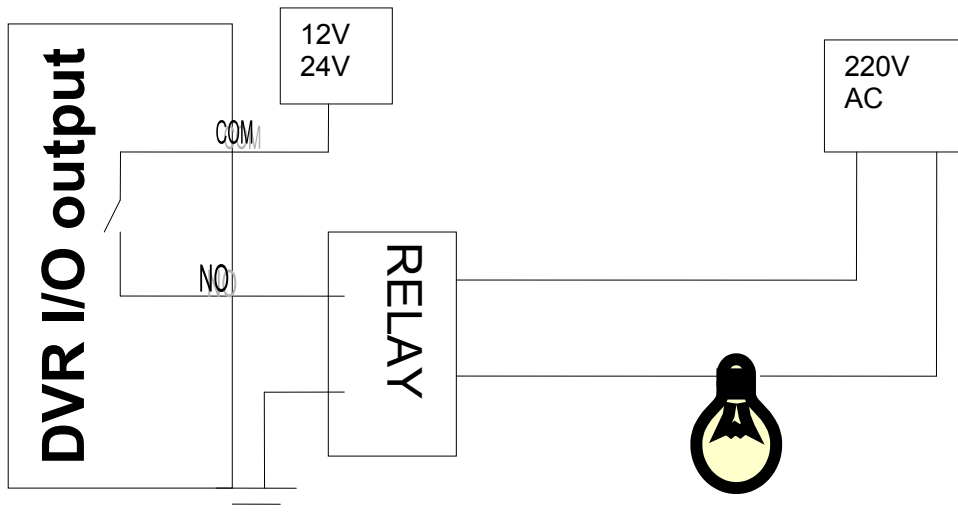

#### 5. System Network Diagram

---

## 5. FAQ

If your problem is not listed below, please call our toll-free number for more support.

**1. Question: DVR is not working after starting?**

Answer:

- ◇ Check the adaptor input
- ◇ Check the on-off power line, is it well-connected?
- ◇ Check the power on-off
- ◇ Check the upgrade procedure
- ◇ Check the main board of DVR

**2. Question: DVR is rebooting automatically or stopped after starting the DVR for several minutes?**

Answer:

- ◇ Instability or low input voltage
- ◇ Bad track hard drive or the line of hard drive is bad
- ◇ On-off power supply is not enough
- ◇ The front-end video signal instability
- ◇ High temperature, too much dust, too bad the DVR operating environment
- ◇ The main board is not well-connected with other boards
- ◇ The hardware of DVR is defective

**3. Question: No output of single channel, multi channel or all channel video?**

Answer:

- ◇ Please check the adaptor of camera whether to see if it is well-connected
- ◇ Please check the cable for connecting video input/output in the back panel of DVR
- ◇ Please insert the video source directly into the display device and check If they are causing the problem.
- ◇ Check the brightness of the picture and bring it back to its original default setting
- ◇ No video input signal or too weak
- ◇ Display settings in the preview set to be closed
- ◇ The hardware of DVR is defective

**4. Question: DVR cannot record after startup and the interface is showing "H"**

Answer:

- ◇ Make sure power adaptor is DC 19V
- ◇ Make sure HDD is formatted
- ◇ Check the power and data connection cables of the HDD
- ◇ The HDD is defective
- ◇ The SATA port is not working

**5. Question: What is meaning of "R" "M" "I" "H" showed in interface?**

Answer:

- ◇ "R" means the channel is recording
- ◇ "M" means the channel is on motion detection
- ◇ "I" means the channel is on alarm
- ◇ "H" means there is either no HDD. the HDD is bad or the HDD is full

**6. Question: DVR is having problem with real-time images, such as bad image color or serious brightness distortion**

Answer:

- ◇ If PAL and NTSC is not correctly selected on the BNC output, the images will be in black and white
- ◇ DVR is not compatible with monitor
- ◇ The video transmission distance is too far
- ◇ The setting of DVR color, brightness and so on are wrong

**7. Question: No audio sound when monitoring?**

Answer:

- ◇ Check sound box or speaker functions. Also check possible short circuit.
- ◇ Audio source may be connected to the video channel. You can click to full-screen to check.

- 
- ◇ The hardware of DVR is defective
- 8. Question: No audio sound when playing back?**  
Answer:  
◇ Setting problem: open audio-video item  
◇ Check the audio to see if it is closed in playback interface
- 9. Question: System time is not correct?**  
Answer:  
◇ Wrong setting or user did not click "Edit" to confirm  
◇ Battery is not connected properly  
◇ Battery is dead. Please change.
- 10. Question: Why the "Stop recording" by the right mouse button does not work, how to stop recording?**  
Answer:  
◇ The "Stop recording" by the right mouse button is only suitable for Manual recording. It can't stop recording when it's in "start recording" or the video in video plan.  
◇ If you want to stop recording, please set the time is not recording.
- 11. Question: "Stop recording" function by the right mouse button does not work. How to stop recording?**  
Answer:  
The "Stop recording" by the right mouse button is for Manual Recording only. It can not stop recording when it is in "start recording" or the video is in video plan. If you want to stop recording, please set the time to not recoding.
- 12. Question: Motion detection is not working?**  
Answer:  
◇ The setting of motion detection area is not correct  
◇ Sensitivity is too low
- 13. Question: CD-writer /USB backup error**  
Answer:  
◇ The data exceeds the capacity of backup device  
◇ The backup device is incompatible  
◇ The backup device is damaged
- 14. Question: Remote control cannot work?**  
Answer:  
◇ The address of remote control is not correct  
◇ The distance of remote control is too far or the angle is too biased  
◇ Remote control batteries run out  
◇ Remote control is damaged or the front panel of DVR is damaged
- 15. Question: WEB cannot login?**  
Answer:  
◇ Please check the network to see if it is connected. Check if LINK or 100M LED is displayed normally on the panel; use ping xxx.xxx.xxx.xxx (DVR IP) to check if the Internet is linked properly.  
◇ Recommended to use Windows XP or Vista operating system, also use IE6.0 browser or IE7.0 browser  
◇ ActiveX control has been blocked. Please manually install ActiveX control again.  
◇ Please install DX8.1 and upgrade your video card driver
- 16. Question: There is no picture or picture is not clear when you preview the recording or playback the recording via IE**  
Answer:  
◇ If you access DVR by IE, please choose "Wan" in "web environment"  
◇ Please try "Close windows" by the right mouse button, and try "Open windows" again
- 17. Question: It displays "other members are setting....." while setting DVR by IE**  
Answer:  
◇ It probably means someone else is setting the DVR. Please check the DVR configuration interface or exit DVR.



## 6. TROUBLE SHOOTING

PROBLEMS	REASON	SOLUTION
----------	--------	----------

System not powering up	Cable from adapter is loose or unplugged	Check all power connected securely. Confirm all connection
Remote control is not working	Batteries are low, or battery's connection is loose.	Change batteries. Reload the batteries.
Mouse not detected by system	Mouse is not connected	Reconnect and check all connection
	System needs to reset	Turn off the system, then reboot/power on
No picture on Selected channels, Camera not display picture	Camera cable are loose or power become disconnected	Check both video cable and power feed cable connection
A "whirring" noise is coming from the system	Fan is active	The noise means the exhaust fan is working normally
The system beeps at startup	Normal	The beep at startup is normal
The system beeps during motion detection	Motion detection is enabled, but the alarm buzzer is activated.	Open the main menu and click ADVANCE. Click ALARM; set the Buzzer to 0s and click APPLY
Hard drive storage display show full(0%), And no longer recording	"Overwrite" is not enabled	From the main menu, Selected HDD>overwrite> Enable and click APPLY
I am not receiving email notifications	Email notification is disabled. Default setting is disabled, but you have not entered your own SMTP information	Open main menu>ADVANCE >ALARM; click EMAIL SETUP; under EMAIL select ON When use your own SMTP server, deselect the Default box, and enter your SMTP server address, Port, User name, and Password in the respective fields.

## 7. PACKAGE CONTENT



**CD with E-Book**



**Batteries**



**Mouse(Optional)**



**DC Power Supply**



**Remote Control**



**Phillips screwdriver**



**User Manual**